

MINI Laser Display System User's Manual

MODEL: M015RG/M015A/M015B/M015C/M015D/M015E/M015BG/M015RB

While receiving the product, please take carefully and check whether it was been destroyed on conveyance. After that, check the following parts.

1.1×Laser Unit.
2.1×A dapter
3.1×Handle & Handle seat 4.1×Triangle Bracket(optional)
5.1×User Manual.
6.2×M3 Screw、1×M4 Screw

6.2×M3 Screw、1×M4 Screws

Installation guide

- 1.Be sure that there is no frammable or explosive objects at the arrange of 1.5 meters leastways, while installation. Keep 0.5 meter away from wall at least.
- Before installation ,please make sure the power voltage matches the system rated voltage.
 Be sure that the fan and exhaust is not blocked.
- 4. The laser display system should be fixed firmly.

Safety guide

- $\begin{array}{l} \hbox{1. The unit is the class 3A laser product.} \\ \hbox{2. Must be operate according to the manual, do not disassemble the lamps yourself , if} \end{array}$ there is any problem, please contact with the professional.

 3. The product should be installed immovably by professional technicion.
- 4. Maitain the unit working at the most favorable temperature 15°-35°. The system should be kept dry. Please don't use the system in the condition of rain ,wet or dust. Need waterproof equipment in the open air.
- 5. Do not turn on or off the system frequently, and avoid keeping it working for a long time.
- 6. Prevent outer dangerous objects into the system, or there will be malfunction. 7. The system should be keep 1m far away from the objects shined at least.
- 8. When transport the system again, please use the original package to avoid shaking.


 9. Keep the unit far away from other A class high voltage-flash objects.

 10.Do not look at the light directly.

Technical Parameters

	M015RG	M015C	M015A	M015B	M015D	M015E	M015RB	M015BG
Adapter power supply	Input 100-240VAC; Output 5VDC, 1A						Input 100-240VAC; Output 12VDC, 1A	
Laser power	G≥8mW		G≥20mW			R≥60mW	B≥100mW	
	R≥60mW		R≥60mW			B≥100mW	G≥8mW	
Sanner angle	$\pm45^{\circ}$							
Control mode	Sound control, Auto control, stroble control, the external potentiometer can adjust sound sensitivity, strobe speed, grating rotation speed.							
Dimensions	117*92*52mm							
Weight	0.4Kg							

Backboard sketch map

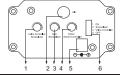

- 1 Sound sensitivity adjustment control knob.
- 2.MIC: Voice signal receiver
- 3 Auto: Auto strobe control knob
- 4.Motor Speed: Speed adjustment control knob of the motor
- 5.DC 5V: Input power
- 6 Segment switch: Change working mode

Big Dipper Laser Science And Techonlogy Co., Ltd

All products made from Big Dipper Laser Company have anti - fake identification, please verify the anti-counterfeit label at the bottom of the case to ensure the interests of consumers.